

Dynamic TV Remote Control special buttons

My Demand Button – shows Tutorials

GUIDE – Takes you to the Interactive TV guide

- Navigate with your Up/Down Left/Right Arrows
- Day Button moves day to day but keeps the same time
- Green – Restart * -Yellow- Search
- Blue – Favorites – Filters by Category

Click Guide Button once guide goes to full screen

Click Guide button twice picture goes to right corner

Yellow Button – Takes you to apps,

(What's hot-Cable Shows,Games,Showtimes-for Theaters,Weather forecast)

Movie Shows, times and theaters – After selecting the yellow button:

To change theaters – arrow up to Top bar that says theaters name,
arrow right to change theaters

Blue button while looking at the Movies will change day.

Red button – Weather Current Conditions

While in here if chose:

Green button will take you to forecast,

(Can arrow sideways to get details for each day)

Yellow will take you to radar, blue here goes between current-Animated

Green Button – Recent calls, Voicemails, Messages

For DVR Recordings – while in the list

- Red button is Delete -Green Button is Actions
- Yellow is Search -Blue is Search

Can set up recordings to start 15 Min before and/or 60 min after

Closed Captioning - # button, (Choose On, Basic, Advanced, Off)

To set up-Menu-settings-Display-down arrow to get to More-Ok, make changes

Favorites – shows your favorite networks, set up in settings/Edit favorites

Menu-settings-edit favorites-use the colors below in this screen

-Red – Discard -Green Actions -Yellow – rename List -Blue – Save list

To pull up your favorites list to watch guide button twice

*Can not Rewind, Pause or Fast forward Programs
that don't have the restart symbol on the guide.

But you can record the program and rewind, pause,
or fast forward the program as it's being recorded.

4 Button Functions

SYSTEM ON/OFF

Designed to send Power On/Off commands for up to four Components with one button press. Refer to section G for details.

MENU

Displays the Applications Menu.

GUIDE

Displays the program guide listings.

SELECT

Selects highlighted screen options.

EXIT

Exit from current screen.

DAY▲/▼

Skip forward or backward a whole day in the program guide.

VOLUME ▲/▼

Raises or lowers the sound level.

ON DEMAND

Provides direct access to On Demand channel.

MUTE

Silences the audio. Press to activate. Press again to restore sound to the previous level.

REW

Replays the previous 15 seconds of a program.

My DVR

Displays a list of programs you have recorded, allowing you to select one for viewing.

INPUT(TV/VCR)

Selects the video source.

ON-OFF

Opens or closes the Cable Box PIP (Picture-in-Picture) window.

Video Source

Selects the video source.

SWAP

Swaps the contents of the PIP window and the main viewing screen so that the PIP window displays on the main screen.

POWER

Allows you to turn your TV, VCR, DVD, AUX and Cable Box On and Off.

AUX, DVD, TV, CBL

Used to select the component you want to operate and signals remote control activity.

INFO

Displays information about the program currently playing or highlighted in the program guide.

PAGE▲/▼

Accesses pages above or below the information currently displayed.

CURSOR NAVIGATION PAD (▲, ▼, ◀, ▶)

Navigate to and highlight an item from the on-screen choices.

LAST

Returns to the previously tuned channel.

A, B, C, D

These functions are pre-set by your cable provider.

CHANNEL ▲/▼

Selects the next higher or lower channel.

FAV

Displays favorite channels.

LIVE

Displays live television programming.

VCR/DVD/VOD KEYS

Perform standard VCR and DVD functions when in VCR and DVD mode, and Video-On-Demand functions when in CABLE mode.

NUMBER PAD

Enter numbers to tune to channels. Also, make numeric entries on on-screen menus.

NOTE: You can also use the CH ▲/▼ or the program guide as alternate ways to tune to channels.

ASPECT(■)

Change the HD screen viewing aspect.

PIP CH▲/▼

Selects the next higher or lower channel in the PIP (Picture-in-Picture) window.

MOVE

Moves the PIP (Picture-in-Picture) window to another location on the screen.

